



HP 14-r008la Hard Disk Replacement

Written By: Internet Libre



Step 1 — Hard Disk




- Shutdown the computer and remove the battery
- Turn it right-side down, print a picture of its back cover

Step 2 — Removing screws




- Use double-sided tape to stick all the screws in its right place on the printed picture
- Under the ram cover there is a screw, remove it
- ⚠ Dvd reader will come off when you remove its screw
- Remove the two screws under the DVD reader

Step 3 — Removing rubber feet and Keyboard

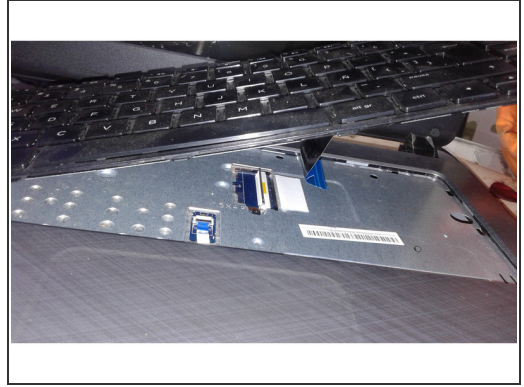


- Remove the two rubber feet beside battery place
- Turn the laptop right-side up and open and insert a pry tool along the top-side keyboard until release it
- Release the connector to which the keyboard cable is attached, and then disconnect the keyboard cable.

Step 4 — Remove mother board cover

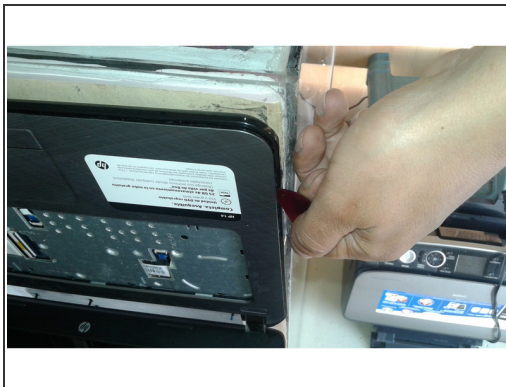

- Remove three screws under keyboard
- ⓘ Don't forget the security protocol we followed in step 1 and 2
- Insert pry tool around the cover in which touchpad used to be until release
- ⚠ First release the left side because the right has a clips which hold the cover.

Step 5 — Remove HDD and insert another one

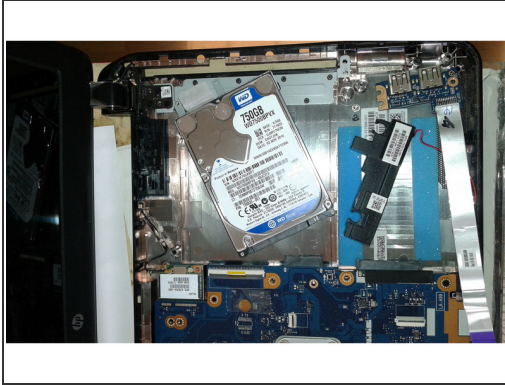

- Release the connector to which the cable of two usb ports has been attaching
- Remove the two usb ports and the speaker, and the two HDD screws then pull the HDD off
- Remove metal frame in the first HDD and put it in the second

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:23:44 PM.